



## 2003 RS6 Scheduled Maintenance Intervals

Miles (in thousands)	5/25/45/65/85	15/35/55/75/95
Kilometers (in thousands)	8/40/70/100/130	25/55/85/115/145
<b>Engine Oil/Oil Filter</b> – change the oil and replace oil filter (Caution: RS6 uses only oil fulfilling the VW 50501 specifications and with the viscosity 5W-40)	●	●
<b>Engine</b> – check for leaks (visual inspection)		●
<b>Radiator</b> – clean externally		● 35K and 75K only
<b>Condenser</b> – clean externally		● 35K and 75K only
<b>Cooling System</b> – check level, add if necessary		●
<b>Exhaust System</b> – check for damage, leaks (visual inspection)		●
<b>Engine OBD</b> – check memory, purge if necessary (where applicable)		●
<b>Door Hinge Mechanisms</b> – lubricate		●
<b>Battery</b> – check electrolyte, add if necessary		●
<b>Wiper/Washer</b> – check fluid, add if necessary	●	
<b>Windshield Wiper and Washer/Headlight Washer</b> – check adjustment and function, add fluid if necessary		●
<b>Tires &amp; Spare</b> – check for wear and damage, check pressure*	●	●
<b>Service Reminder Display</b> – reset	●	●
<b>Brake System</b> – check for damage, leaks, thickness of pads and brake fluid level (visual inspection)	●	●
<b>Drive Shaft Boots</b> – check boots (visual inspection)		●
<b>Road Test</b> – check braking, kick-down, steering, electrical, heating and ventilation systems, air conditioning, Automatic Shift Lock (ASL) and power accessories		●
<b>Lights</b> – check**		●
<b>Front Axle</b> – check tie rods and dust seals on ball joints and tie rod ends		●
<b>Automatic Transmission and Final Drive</b> – check for leaks (visual inspection)		●
<b>Power Steering Fluid</b> – check, add if necessary		● 35K and 75K only
<b>Dust/Pollen Filter</b> – replace		●
<b>Sliding Roof</b> – clean, lubricate rails		● 15K, 35K, 55K and 95K only
<b>Intercooler Hoses</b> – clean internally – clean externally		● 15K, 35K, 75K and 95K only ● 35K and 75K only
<b>Air Cleaner</b> – replace filter element and clean housing		● 15K, 35K, 55K and 75K only
<b>Fuel Filter</b> – replace		●
<b>Spark Plugs</b> – replace		●
<b>Ribbed Belt</b> – check for wear (visual inspection) – replace		● 15K, 35K, 55K and 95K only ● 75K only
<b>Timing Belt</b> – check for wear (visual inspection) – replace belt, tensioner assembly and idler pulley		● 15K, 55K and 95K only ● 35K and 75K only
<b>Front Sunroof Drains (where applicable)</b> – open sunroof to check front water drains and clean if necessary (U.S. only)		● 35K and 75K only
<b>Plenum Panel</b> – remove cover for plenum panel to check water drains and clean if necessary (U.S. only)		● 35K and 75K only

**Brake Fluid** – replace every 2 years, regardless of mileage.

**Airbag** – replace every 14 years, regardless of mileage.

\*Rotate tires at 5K and 45K only. Check renewal date of tire repair set (where applicable) at 15K, 35K, 55K, 75K and 95K. Exchange tire seal solution (if expired) at 55K only.

\*\*Check headlight adjustment at 55K and 95K.

Audi of America, Inc. believes the information and specifications to be correct at the time of printing. Specifications, maintenance intervals, standard features and options subject to change without notice.