

2004 Scheduled Maintenance Intervals

| Miles (in thousands) | 5/25/45/65/85/105 | 15/55/95 | 35/75 |
|--|---------------------|------------------------------------|--|
| Kilometers (in thousands) | 8/40/70/100/130/160 | 25/85/145 | 55/115 |
| Engine Oil – change oil and replace filter | ● | ● | ● |
| Wiper/Washer/Headlight Washer – check adjustment and function, add fluid if necessary | ● | ● | ● |
| Tires and Spare – check for wear and damage, check pressure – check for wear and damage, check pressure and renewal date of tire set (where applicable) | ● | ● | ● |
| Tires – rotate | ● SK only | | |
| Service Reminder Display – reset | ● | ● | ● |
| Brake System – check for damage, leaks, pad thickness, fluid level – check thickness of pads and brake fluid level | ● | ● | ● |
| Cooling System – check level, add if necessary | | ● | ● |
| Exhaust System – check for damage, leaks | | ● | ● |
| Engine On-Board Diagnostics – check fault memory | | ● | ● |
| Engine Compartment – check for leaks | | ● | ● |
| Battery – check electrolyte level and add if necessary | | ● | ● |
| Dust and Pollen Filter – replace | | ● | ● |
| Automatic Transmission and Final Drive – check for leaks | | ● | ● |
| Manual Transmission and Final Drive – check for leaks | | ● | ● |
| DSG (direct shift gearbox) – change oil and replace filter element | | | ● TT 3.2L only |
| Haldex Clutch – change oil – change oil and filter | | ● TT only | ● TT only |
| Sunroof – clean guide rails and lubricate rails with grease spray | | ● | ● |
| Front Sunroof Drains (where applicable) – open sunroof to check front water drain and clean if necessary (U.S. only) | | | ● |
| Plenum Panel – remove cover to plenum panel to check water drains and clean if necessary (U.S. only) | | | ● A4, A4 Avant, A4 Cabriolet, S4, S4 Avant, S4 Cabriolet, A6 and A8 |
| Front Axle – check dust seals on ball joints and tie rod ends | | ● | ● |
| Lights – check all lights, check headlight adjustment | | ● | ● |
| Drive Shaft Boots – check | | ● | ● |
| Doors – lubricate doors, check straps | | ● | ● |
| Spark Plugs – replace at 35,000 miles or 3 years, whichever occurs first. Then, every 40,000 miles or 3 years, whichever occurs first. – replace at 55,000 miles or 6 years, whichever occurs first. Then, every 60,000 miles or 6 years, whichever occurs first. – replace at 75,000 miles | | ● 55K only: Allroad 4.2, S4 and A8 | ● 35K only: except Allroad 4.2, S4 and A8 ● 75K only: except Allroad 4.2, S4 and A8 |
| Continuously Variable Transmission (multitronic) – change ATF | | | ● |
| Power Steering Fluid – check, add if necessary | | | ● |
| Air Cleaner – clean housing, replace filter element | | ● 55K only: A4 and A8 | ● Except A4 and A8 |
| Ribbed V Belt – check condition – replace | | | ● 75K only: 3.2L VR6 and 3.0L V6 ● 75K only: except 3.2L VR6 and 3.0L V6 |
| Snow Screen for Air Cleaner – clean | | ● A4 only | ● A4 only |
| Road Test – check braking, kick-down, steering, electrical, heating and ventilation systems, air conditioning, shift lock operation and power accessories | | ● | ● |
| Rear Lid Hinges – lubricate | | ● A8 only | ● A8 only |
| Timing Belt – replace | | | ● 75K only: all models except 3.0L engines and TT 3.2L |
| Timing Belt and Timing Belt Tensioning System – replace | | | ● 75K only: 2.7L turbo |
| Brake Fluid – replace every 2 years regardless of mileage. | | | |
| Cloth Top – check function and rollover protection every 2 years regardless of mileage (Audi A4 Cabriolet only). | | | |

Audi of America, Inc. believes the information and specifications to be correct at the time of printing. Specifications, maintenance intervals, standard features and options subject to change without notice.