

**2012 USA Volkswagen Maintenance
Schedule**



Your Dealer Alternative



Routan Only

Miles	8,000	16,000	24,000	32,000	40,000	48,000	56,000	64,000	72,000	80,000	88,000
Change the engine oil and engine oil filter	X	X	X	X	X	X	X	X	X	X	X
Rotate tires. Rotate at the first sign of irregular wear, even if it occurs earlier than prescribed interval	X	X	X	X	X	X	X	X	X	X	X
If using your vehicle for any of the following; Dusty or off-road conditions, Inspect the engine air cleaner filter; replace if necessary		X				X				X	
Replace the air conditioning filter (if applicable)		X		X		X		X		X	
Replace the engine air cleaner filter				X				X			
Inspect the brake linings: replace if necessary		X		X		X		X		X	
Inspect the CV joints			X			X			X		
Inspect the exhaust system. Perform the first inspection at 16,000 miles or 12 months		X	X			X			X		
Inspect the front suspension, tie rod ends, and boot seals for cracks or leaks and all parts for damage, wear, improper looseness or end play; replace if necessary		X		X		X		X		X	
Change the automatic transaxle fluid and filter if using your vehicle for any of the following: Police, taxi, fleet or frequent trailer towing.								X			

© 2012 Volkswagen Group of America, Inc.

All rights reserved. Information contained in this document is based on the latest information available at the time of printing and is subject to the copyright and other intellectual property rights of Volkswagen of America, Inc., its affiliated companies and its licensors. All rights are reserved to make changes at any time without notice. No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, nor may these materials be modified or reposted to other sites, without the prior expressed written permission of the publisher.

Revised: September 2012

2012 USA Volkswagen Maintenance Schedule



Routan Only

Miles	96,000	104,000	112,000	120,000	128,000	136,000	144,000	152,000
Change the engine oil and engine oil filter	X	X	X	X	X	X	X	X
Rotate tires. Rotate at the first sign of irregular wear, even if it occurs earlier than the prescribed interval	X	X	X	X	X	X	X	X
If using your vehicle for any of the following: Dusty or off-road conditions. Inspect the engine air cleaner filter: replace if necessary			X				X	
Replace the air conditioning filter (if applicable)	X		X		X		X	
Replace the engine air cleaner filter	X				X			
Inspect the brake linings: replace if necessary	X		X		X		X	
Inspect the CV joints	X			X			X	
Inspect the exhaust system	X			X			X	
Inspect the front suspension, tie rod ends, and boot seals for cracks or leaks and all parts for damage, wear, improper looseness or end play: replace if necessary	X		X		X		X	
Change the automatic transaxle fluid and filter if using your vehicle for any of the following: Police, taxi, fleet or frequent trailer towing.								
Flush and replace the engine coolant at 104,000 miles or 60 months (whichever occurs first)		X (1)						
Replace the spark plugs (3.6L engine)	X							
Inspect and replace the PCV valve if necessary	X							
Change the automatic transmission fluid and filter (s)				X				
Replace the accessory drive belt (s)				X				

1. Flush and replace the engine coolant at 104,000 miles or 60 months (5 years) (whichever occurs first)

© 2012 Volkswagen Group of America, Inc.

All rights reserved. Information contained in this document is based on the latest information available at the time of printing and is subject to the copyright and other intellectual property rights of Volkswagen of America, Inc., its affiliated companies and its licensors. All rights are reserved to make changes at any time without notice. No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, nor may these materials be modified or reposted to other sites, without the prior expressed written permission of the publisher.

Revised: September 2012